

THE SUREFIRE NO-HASSLE GUARANTEE

This product is guaranteed for three years. We will do what it takes to keep your Surefire gear running smoothly. Surefire warrants that if you – our customer – purchase this product, and we determine that it is defective in material and/or workmanship during warranty period, we will repair or replace it. No hassle!

STANDARD DISCLAIMER

This product comes with a three-year warranty from the date of purchase, which covers defects in materials and workmanship. The non-removable battery is also covered during this warranty period. The warranty does not cover any damages resulting from normal wear and tear, misuse, abuse, negligence, or unauthorized modifications or user repairs. In the event that an issue with a Surefire product is not covered under this warranty Surefire can arrange to have the product repaired for a reasonable fee.

WARRANTY CLAIMS

For claims, contact Customer Service at 714-545-9444 to obtain a Return Merchandise Authorization number (RMA#). Then package the unit carefully and send to (no CODs):

SureFire, LLC.  
Repairs Department, RMA# \_\_\_\_\_  
17680 Newhope Street, Suite B  
Fountain Valley, CA 92708

SureFire will pay any reasonable shipping costs to return the unit to you.


BATTERY INFORMATION & WARNING

Do not attempt to remove or replace the STILETTO battery. Doing so will void the warranty. If the STILETTO needs to be repaired, contact Surefire at 714-545-9444 or techsupport@surefire.com.



STILETTO

MULTI-OUTPUT RECHARGEABLE POCKET LED FLASHLIGHT  
PLR-A

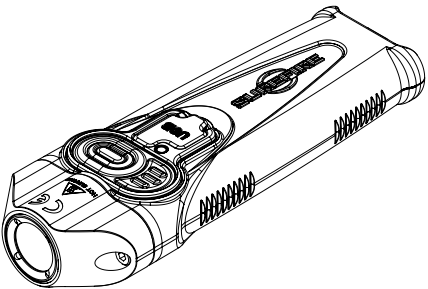

SPECIFICATIONS	STILETTO		
	OUTPUT	Low: 5	Med: 250 High: 650 lumens
	RUNTIME	Low: 30	Med: 2 High: 1.75 hours
	STROBE RATE	Tactical Switch: 9 Emergency: 3-4 Hz	
	PEAK BEAM INTENSITY	1,530 candela	
	DISTANCE	78 meters	
	CONSTRUCTION	Aluminum / Polymer	
	FINISH	Hard Anodized (MIL-A-8625 Type III, Class 2)	
	WEIGHT (w/batteries)	2.8 oz (79 g)	
	LENGTH	4.45 in (11.3 cm)	
	BEZEL DIAMETER	0.8 in (2.03 cm)	
	BATTERIES	Lithium polymer rechargeable (integrated)	
	SWITCHING	Primary, Tactical, and Programming	
	LIQUID INGRESS PROTECTION	IPX4	

All performance claims tested to ANSI/PLATO FL 1-2019 Standard.

USER MANUAL



18300 MT. BALDY CIRCLE  
FOUNTAIN VALLEY, CA 92708-6122  
SUREFIRE.COM


Revision H 2-2024  
71-01-1058  
PLR-A



# STILETTO

## KIT CONTENTS

- STILETTO
- USB-TO-MICRO USB cable

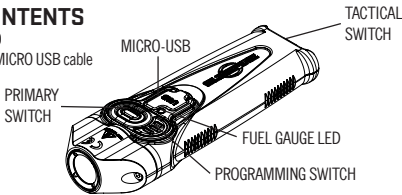

## LIGHT OPERATION - PROFILE CONFIGURATION

The STILETTO has three switches (PRIMARY, PROGRAMMING AND TACTICAL).  
**PRIMARY** switch: activates the light in the various outputs  
**PROGRAMMING** switch: see “HOW TO CHANGE PRIMARY AND TACTICAL MODES”  
**TACTICAL** switch: for momentary, strobe or constant-on output

### PRIMARY SWITCH ACTIVATION

**Mode 1 (Default):** Press the PRIMARY switch to cycle from LOW to MEDIUM to HIGH to OFF. The cycle will repeat if the PRIMARY switch is pressed within two seconds. If the STILETTO is activated on either LOW, MEDIUM or HIGH and the PRIMARY switch has not been pressed within two seconds, the next press shuts the light OFF. The last used output is not remembered.

**Mode 2:** Same as above, but with the cycle changed to HIGH to MEDIUM to LOW to OFF.

### TACTICAL SWITCH ACTIVATION

**Mode 1 (Default : TACTICAL & STROBE):** Press and hold the TACTICAL switch for HIGH only; release the switch to shut OFF. For STROBE, rapidly tap the TACTICAL switch three or more times and hold down on the 3rd+ press. Release the switch to shut the STROBE OFF.

**Mode 2 (Constant-on):** Press the TACTICAL switch for constant-on in HIGH only. When the switch is pressed again, the light will shut OFF.

### EMERGENCY MODE ACTIVATION

Press and hold the PROGRAMMING switch for five seconds or more to activate the MEDIUM frequency, MEDIUM output STROBE. Press the PRIMARY or TACTICAL switch to shut EMERGENCY MODE OFF.

## HOW TO CHANGE PRIMARY AND TACTICAL MODES

The PROGRAMMING switch is used to select the behavior of the PRIMARY and TACTICAL output buttons. The STILETTO must be off to change modes. The PRIMARY and TACTICAL switches are changed independently (Ex: PRIMARY switch can be on MODE 1 and TACTICAL switch can be on MODE 2.)

### CHANGING THE MODES FOR EITHER THE PRIMARY OR TACTICAL SWITCHES:

- Step 1: Press and hold the PROGRAMMING switch for two to five seconds. The Fuel Gauge LED will illuminate BLUE to indicate programming mode.
- Step 2: While holding the PROGRAMMING switch and observing the BLUE LED Fuel Gauge, tap either the PRIMARY or TACTICAL switch once and release the PROGRAMMING switch. Pressing the PRIMARY or TACTICAL switch more than ONCE exits the programming mode. Once the PROGRAMMING switch is released, the Fuel Gauge LED blinks GREEN three times for success or RED three times for error.

## LOCKOUT MODE

### To Enable Lockout Mode

1. Press and hold the PRIMARY and TACTICAL switch simultaneously for two seconds, then release.
2. The green Fuel Gauge LED will blink twice to confirm Lockout Mode is enabled.  
*NOTE: The PRIMARY, TACTICAL and PROGRAMMING switches will not activate the Stiletto when Lockout Mode is enabled.*

### To Disable Lockout Mode:

1. Press the PRIMARY and TACTICAL switch simultaneously, then release.  
*NOTE: The PRIMARY, TACTICAL and PROGRAMMING switches will be instantly ready for use when Lockout Mode is disabled.*

## FUEL GAUGE

The STILETTO is equipped with a LED that displays the battery status, both during use and while charging.

	FUEL GAUGE LED INDICATOR	
	CHARGING	DISCHARGING
<b>SOLID GREEN</b>	100% Charged, Max Capacity	95-100% Charged
<b>SOLID YELLOW</b>	Charging, Medium Capacity	Battery Charge Low (reduce light output level or recharge)
<b>SOLID RED</b>	Charging, Low Capacity	Recharge Immediately
<b>FLASHING RED</b>	Pre-charge mode	Battery Critically Low

## CHARGING THE STILETTO

The STILETTO is powered by an integral lithium polymer (LiPo) battery (950 mAh). The STILETTO's MICRO USB port is for charging input only (Standard 5V, 500 mA).

### How to charge the LiPo rechargeable battery:

1. Insert the MICRO USB cable plug into STILETTO charging port.
2. Insert USB cable plug into a USB port of a computer or another device that will provide power to the STILETTO.
3. When the fuel gauge turns green, the STILETTO is charged to more than 95% of battery capacity.

*NOTE: Charging a fully depleted battery can take up to three hours. The light may be left plugged into the charger without damaging the battery.*

*NOTE: When the STILETTO is being charged and the temperature is too cold (Below 32°F/0°C) or too hot (Above 120°F/50°C), the fuel gauge will blink yellow which indicates charging stopped. Once the temperature reaches 41°F/5°C or 113°F/45°C, it will continue charging. When the battery is drained below 3.0V, the STILETTO has a pre-charge mode when connected to a charger. The Fuel Gauge will blink red rapidly until the battery reaches 3.1V. Once the battery has a minimum of 3.1V, the Fuel Gauge conditions above will apply.*

### ⚠ STROBE WARNING

Exposure to strobing lights may cause dizziness, disorientation, and nausea. A very small percentage of people suffer from photosensitive epilepsy—approximately .00025% of the population—and may experience seizures or blackouts triggered by strobing lights. Visit [www.epilepsyfoundation.org](http://www.epilepsyfoundation.org) for more information about this rare form of epilepsy. Anyone who has had symptoms linked to this condition should consult a doctor before using this product.